

Assembly Sheet for CL20A5

CONTENTS:

2 x PL46
(Plastic Wall Strip)



10 x CL-MC
(Mounting Clips)



20 x CL-147
(A5 Brochure Holders)



5 x CL-SB
(Supporting Bracket)



30 x CL-SJC
(Side Joining Clips)



Important! Please follow the assembly instruction carefully. Please note that the number and type of clips have been provided to configure with the diagram as shown. Any deviation will result in a shortage of the appropriate clips.


STEP 1

Secure wall strip onto wall.
Refer to your builder/handyman for formats of securing to wall
For Example:-
For mounting onto Gyprock walls, suggest using 'Wall Mates'.
For concrete/brick walls suggest using wall plugs etc




STEP 2

Attach the two Mounting Clips into top keyholes of the first pocket

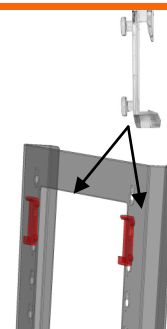


STEP 3

Attach holder onto the wall strip

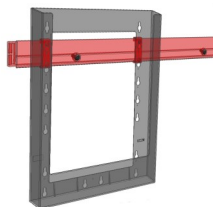


STEP 4

For subsequent pockets attach Side Joining Clips into the keyholes (at desired overlap spacing) to both sides of the holder

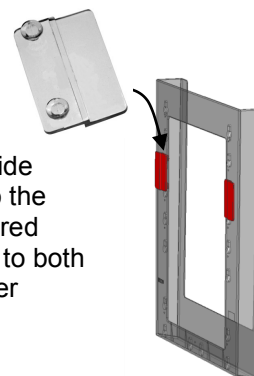

STEP 5

Slide the back of the pocket onto the front of the pocket already mounted to Wall Strip

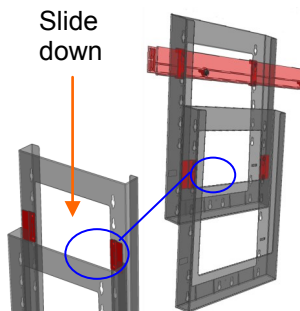

Down Joining Clips grip the face of the preceding pocket.


Go down 4 levels of pockets

STEP 7 Repeat 4 more rows



STEP 6 Fit

Supporting Bracket onto the back of third pocket

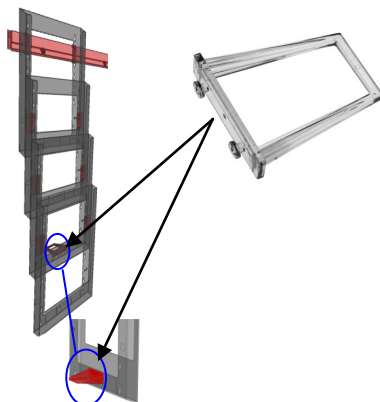

YouTube Video

Assembly of Cliplock™ Standard Wall System (1m 51 sec)
<http://www.youtube.com/watch?v=3ltiNbPFepY>