

Assembly Sheet for CL8DL4A4

CONTENTS:

1 x PL46
(Plastic Wall Strip)



4 x CL-MC
(Mounting Clips)




4 x CL-SB
(Supporting Bracket)



8 x CL-103
(DL Brochure Holders)



4 x CL-213
(A4 Brochure Holders)

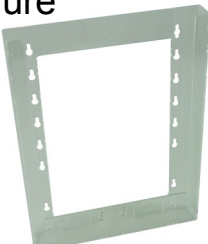

4 x CL-SJC
(Side Joining Clips)



16 x CL-DJC
(Down Joining Clips)



Important! Please follow the assembly instruction carefully. Please note that the number and type of clips have been provided to configure with the diagram as shown. Any deviation will result in a shortage of the appropriate clips.


STEP 1

Secure wall strip onto wall.
Refer to your builder/handyman for formats of securing to wall
For Example:-
For mounting onto Gyprock walls, suggest using 'Wall Mates'.
For concrete/brick walls suggest using wall plugs etc




STEP 2

Attach the two Mounting Clips into keyholes 2 & 3 of the first pocket

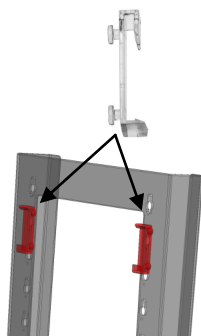


STEP 3

Attach A4 holder onto the wall strip

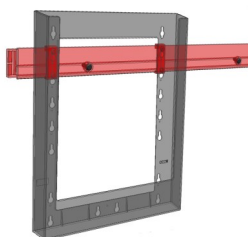


STEP 4

For second A4 pocket attach two Side Joining Clips into the keyholes (at desired overlap spacing) to both sides of the holder ensuring that the clips face towards side of pockets.(Not to overhang the inside of the pocket)

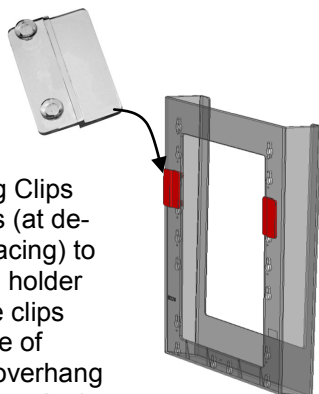

STEP 5


Slide the back of the pocket onto the front of the pocket already mounted to Wall Strip.

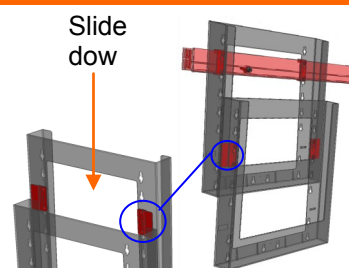

Repeat another row (steps 2-5)

STEP 6

With the DL pockets attach two Down Joining Clips into the keyholes (at desired overlap spacing)

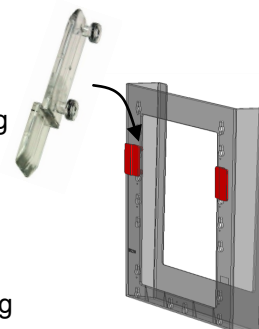

Down Joining Clips grip the face of the preceding pocket.


Duplicate step 5 with the two DL and repeat for last level
Repeat for the 4 rows

A4

A4

DL

DL

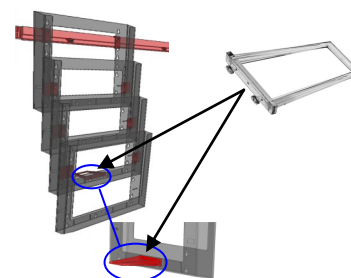

STEP 7

Fit Supporting Bracket onto the back of third level pockets (DL size)

YouTube Video

Assembly of Cliplock™ Standard Wall System (1m 51 sec)
<http://www.youtube.com/watch?v=3ItiNbPFEPY>